



# ZIP System™ Stretch Tape Installation Guidelines For Window Sill Applications




- 1** Window rough opening shall be large enough to allow for the use of shims during installation. Follow window manufacturer instructions for minimum rough opening dimensions.
- 2** Check rough opening is plumb, level and square.
- 3** Apply, with pressure, ZIP System™ stretch tape to cover bottom of rough opening, overhanging onto the sheathing by at least 2" and extending a minimum of 6" up each jamb. After applying, roll over ZIP System stretch tape with ZIP System™ tape roller for better adhesion.

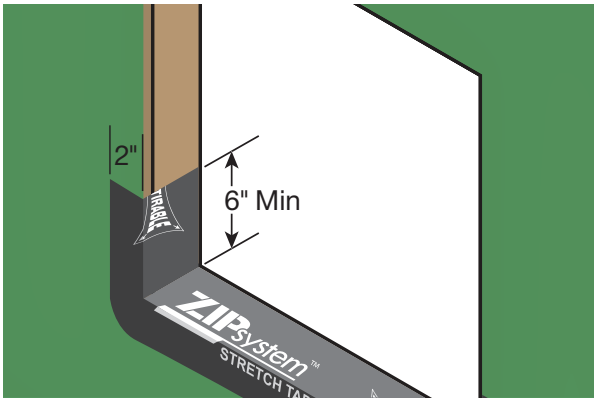

- 4** Place temporary shims at each corner of the rough opening where the jamb meets the sill.

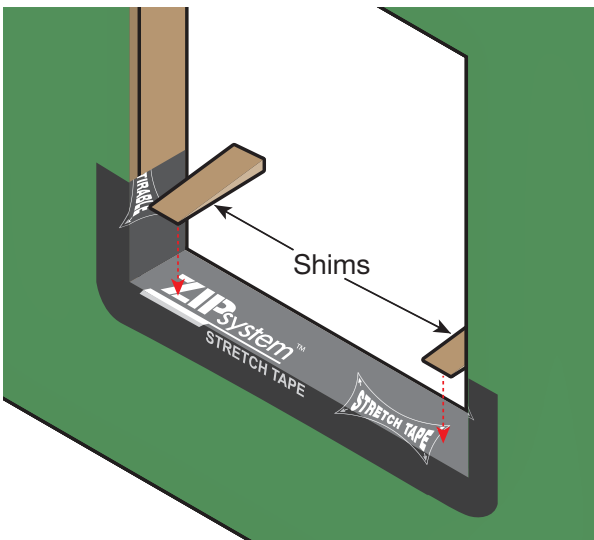

- 5** Insert window from the outside and rest it on the shims.

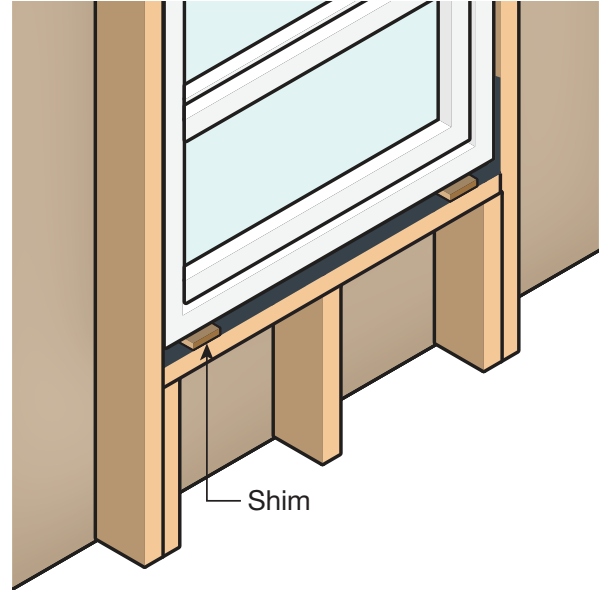

- 6** Check window for square, plumb and level.
- 7** Remove temporary shims and finish window installation.

**NOTE: ZIP SYSTEM™ TAPES ARE PRESSURE SENSITIVE. IT IS IMPORTANT TO PRESS THE TAPE INTO PLACE WITH FIRM PRESSURE. WE RECOMMEND USING A ZIP SYSTEM™ TAPE ROLLER.**

**For Technical Questions:**  
800-933-9220 ext. 2716  
or [techquestions@huber.com](mailto:techquestions@huber.com)

[ZIPSystem.com](http://ZIPSystem.com)