



## Wall: Timber construction *Windtight and rainproof on the outside*


### Mounting facade membrane for open facades – using SOB



- Apply Majvest 700 SOB with the smooth side facing you
- Secure the membrane above the adhesive joint using a stapler




- Lay the second membrane
- Overlap membranes by 10 cm
- Remove the two backing strips and press the bond firmly down

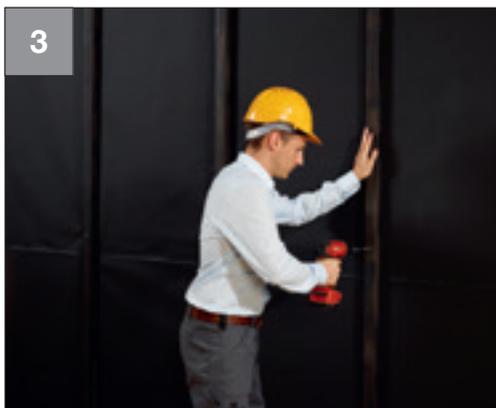

#### After sealing:

- For final attachment of the membrane mount counter slatting in **structure direction directly on the bearing structure**

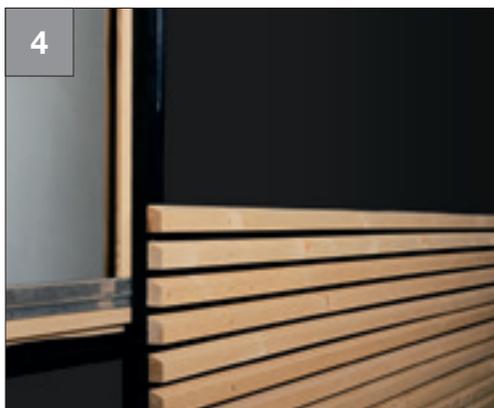

#### How it should look:

- Majvest 700 SOB and Wigluv black behind permanently open facade
- Suitable for facades with joint holes of  $\leq 50$  mm and a surface proportion of max. 40%

**Wall: Timber construction**  
***Windtight and rainproof on the outside***



**Majvest**<sup>®</sup> 700 SOB

P. 132



**Wigluv**<sup>®</sup> black

P. 131